


TexWrite® Cleanroom Spiral Notebooks

Spiral-bound cleanroom notebooks

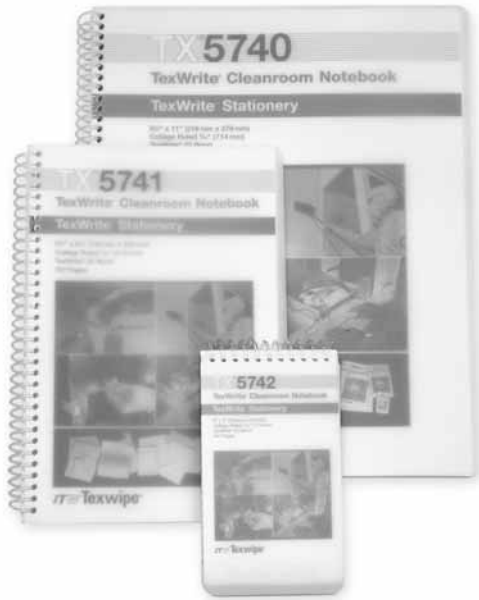

Description

TexWrite® spiral-bound notebooks are an economical choice for note taking and data recording in the cleanroom. The notebooks feature high-density polyethylene covers, plastic spirals and durable TexWrite® latex-impregnated cleanroom paper. Pages are printed with IPA resistant, low-sodium ink for reduced ionic contamination. Notebooks lie flat and pages rotate freely for ease of use.

Features

- White, college-ruled TexWrite® 22 cleanroom bond
- 100 writable pages (50 sheets)
- Spiral binding
- High-density polyethylene covers
- IPA resistant, low-sodium inks
- Cleanroom packaged

Benefits

- Ultraclean with low particle and fiber generation
- Fully rotating pages with ability to lay flat
- Chemical-resistant cover material
- Low ionic contamination

Applications

- Recording notebook
- Record keeping, data transfer and notes

Products

| TX Number | Description | Packaging |
|---------------|---|-----------|
| TX5740 | TexWrite® 22 Cleanroom Spiral Notebook College-ruled, 8.5" x 11" (216 mm x 279 mm) | 10/box |
| TX5741 | TexWrite® 22 Cleanroom Spiral Notebook College-ruled, 5.5" x 8.5" (140 mm x 216 mm) | 10/box |
| TX5742 | TexWrite® 22 Cleanroom Spiral Notebook College-ruled, 3" x 5" (76 mm X 127 mm) | 20/box |



North America
1210 South Park Drive
Kernersville, NC 27284
Tel (800) TEXWIPE
(336) 996-7046
Fax (336) 996-2297
www.texwipe.com
info@texwipe.com

Europe/Middle East
Skejby Nordlandsvej 307
DK-8200 Aarhus N
Denmark
Tel +45 87 400 220
Fax +45 87 400 222

Asia/Pacific
50 Tagore Lane
#02-01 Entrepreneur Centre
Singapore 787494
Tel +65 6468 9433
Fax +65 6468 6772

TexWrite® Cleanroom Spiral Notebooks

TX5740 TX5741 TX5742

Performance Characteristics

| Property | Typical Value | Test Method* |
|---------------------|--|---|
| Basis weight | 80 g/m ² | TM2: The Determination of Basis Weight |
| Caliper | 5.0 mil | |
| Tensile strength | | |
| Machine direction | 5.3 kg | Federal Standards No. 191A:Methods 5102 |
| Cross direction | 4.5 kg | Federal Standards No. 191A:Methods 5102 |
| Tear strength | | |
| Machine direction | 78 g | Elmendorf tear test |
| Cross direction | 79 g | |
| Opacity | 74% | TAPPI Test Method T-425 |
| Surface resistivity | 2.6 x 10 ⁹ ohms** (2.6 x 10 ¹⁰ ohms/sq) | TM14: The Determination of Surface Resistivity of Fabrics and Other Thin, Flat Materials (Adapted from EOS/ESD-S11.11-1993) |

Contamination Characteristics

| Property | Typical Value | Test Method* |
|---------------------|--------------------------------------|---|
| Particles (>0.5 µm) | 4.8 million particles/m ² | TM5: Particles Released from Wipers and Other Materials Under Conditions of Minimal Stress |
| Ions | | |
| Sodium | 85 ppm | TM12: The Determination of Ions in Wipers and Other Materials by Capillary Ion Analysis (CIA) Technique |
| Chloride | 50 ppm | TM12: The Determination of Ions in Wipers and Other Materials by Capillary Ion Analysis (CIA) Technique |

Note: The data in this table represent typical analyses of these products. These are not specifications. ITW Texwipe continually refines both its processes and its products.

This data is the most accurate representation of the typical properties of these products at the time of publication.

* ITW Texwipe test procedures available upon request.

** TM14 at 55% RH.